Cleaning the Franklin BV Valve and Replacing the Plunger & Seal


Hardware Kit 54300978

For questions about this product, or for parts inquiries, please contact our Customer Service Center listed below.

STEP 1

Remove the packaging tape from around the top of the valve.



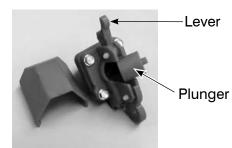



STEP 2

Slide off cover, pivot upper arm up, and remove the plunger.

STEP 3

Clean the rubber part of the plunger and opening to the valve of any mineral deposits or dirt buildup that may be obstructing the normal operation of the valve.

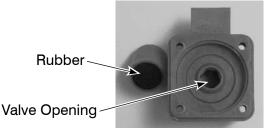

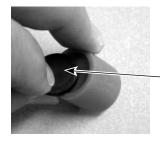



STEP 4

If the rubber seal is grooved but still pliable (not hard and brittle), you may flip it over and use the backside of the seal. If both sides of the seal are hard, replace both the plunger and the seal.

STEP 5

Replace the plunger with the nipple facing you, and the rubber facing the valve.

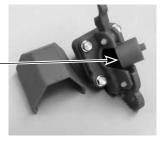

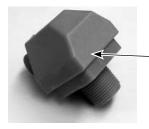


STEP 6

Replace the cover to complete the cleaning of the valve.



CUSTOMER SERVICE CENTER

PO Box 569 Columbus, NE 68602-0569 Ph: 800-447-2751 Fax: (402) 563-7447 www.behlencountry.com

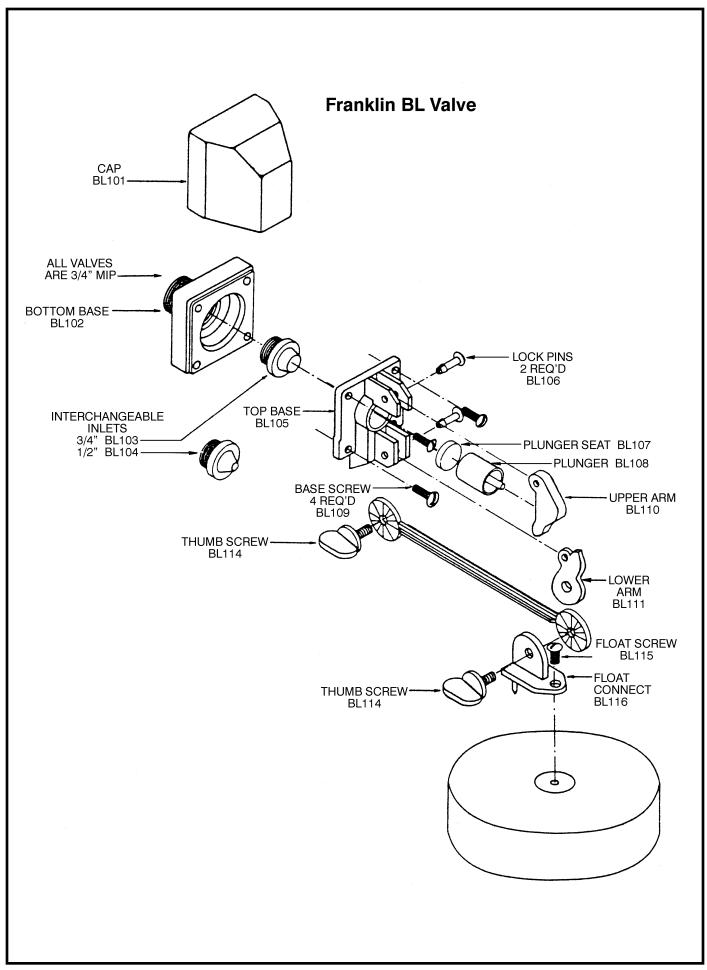

F-20441