
Self-Catch CL-5 Headgate 60110202

Hardware Kit 60900178

THANK YOU FOR PURCHASING THIS PRODUCT

For questions about this product, or for parts inquiries, please contact our **Customer Service Center listed below.**

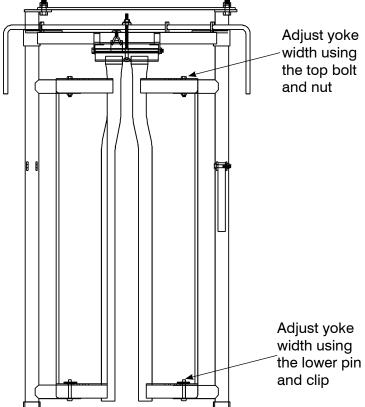

How to adjust the headgate yokes

After determining what size animals are going to be worked, set the voke width to about the same width as the animals' neck size. Initial adjustments are made by removing the top bolts and nuts and lower pins and clips and setting the voke tubes to the desired width (settings 1-3).

Neck width settings are:

Narrowest Setting 1 = 4-1/8"

Setting 2 = 7-1/8"

Widest Setting 3 = 10-1/8"




COUNTYLINE®

Mounting the headgate to wooden posts

First, install 6" dia. wood posts at 33-1/8" center to center as shown. Set post in ground to a depth that is adequate for your soil conditions. Posts should be no more than 70" out of the ground.

Next, lean the headgate up against the post and mark out the hole spacing, or use the diagram as shown.


Then, drill four 5/8" dia. holes through the post. Bolt the headgate to the post. Bolting hardware is customer supplied. We recommend 1/2" dia. x 8" long bolts. Use 1/2" washers to prevent the head of the bolt from digging into the post.

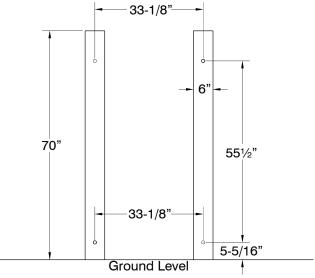

CUSTOMER SERVICE CENTER

PO Box 569 Columbus. NE 68602-0569

Ph: 800-447-2751 Fax: (402) 563-7447 www.behlencountry.com

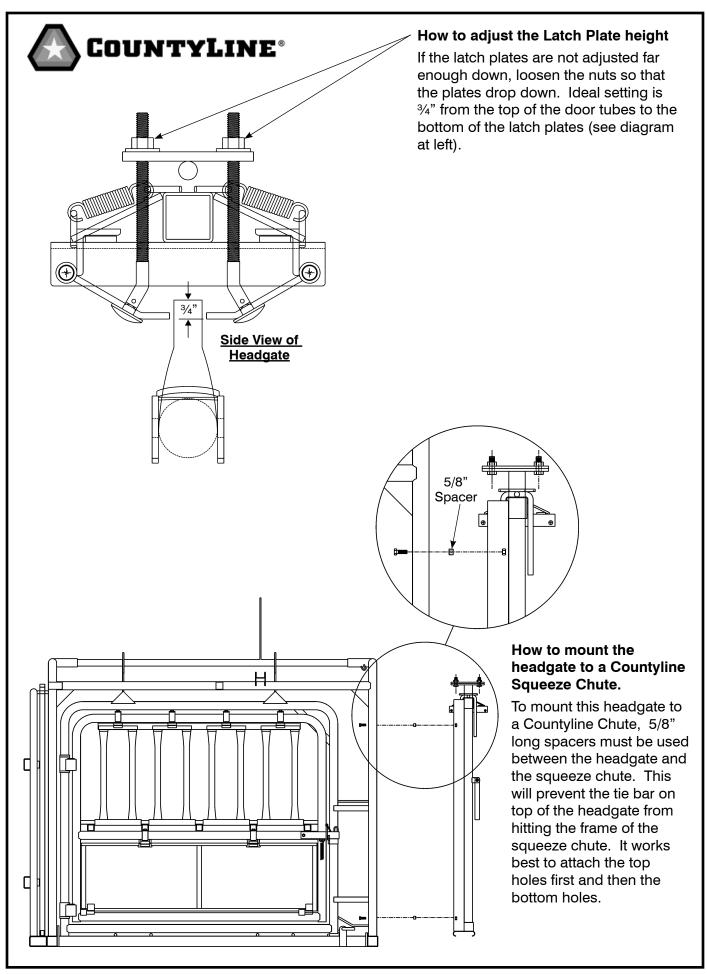

F-19781 12-12-01